

SHARP

Quan trọng



TIẾNG VIỆT

LÒ VI SÓNG HƯỚNG DẪN SỬ DỤNG



Model: R-2343FB-BK
900W

Sách hướng dẫn sử dụng này chứa các thông tin quan trọng mà bạn nên đọc trước khi sử dụng.

QUAN TRỌNG: Có thể có nguy cơ nghiêm trọng đối với sức khỏe nếu không tuân thủ hướng dẫn vận hành này hoặc nếu lò được sửa đổi hoạt động khi cửa mở

NỘI DUNG

NỘI DUNG	1
BIỆN PHÁP PHÒNG NGỪA ĐỂ TRÁNH TIẾP XÚC VỚI NĂNG LƯỢNG LÒ VI SÓNG QUÁ MỨC	2
HƯỚNG DẪN AN TOÀN QUAN TRỌNG.....	2
HƯỚNG DẪN LẮP ĐẶT	5
HƯỚNG DẪN TIẾP ĐỊA.....	5
NHIỀU SÓNG RADIO	6
TRƯỚC KHI GỌI DỊCH VỤ BẢO HÀNH	6
KỸ THUẬT NẤU ĂN	7
HƯỚNG DẪN SỬ DỤNG DỤNG CỤ NẤU ĂN	7
THÔNG SỐ KỸ THUẬT	8
SƠ ĐỒ SẢN PHẨM	8
BẢNG ĐIỀU KHIỂN.....	9
HƯỚNG DẪN VẬN HÀNH.....	10
CÀI ĐẶT ĐỒNG HỒ.....	10
CÀI ĐẶT BỘ HẸN GIỜ	10
NẤU ĂN NHANH.....	11
NẤU BẰNG LÒ VI SÓNG	11
TỰ ĐỘNG RẼ ĐÔNG	11
NẤU TỰ ĐỘNG	12
CHỨC NĂNG TIẾT KIỆM ĐIỆN.....	12
CHỨC NĂNG TẮT TIẾNG	12
BẢO VỆ BẮM DÍNH NÚT.....	12
KHÓA TRẺ EM	13
VỆ SINH VÀ BẢO DƯỠNG	14

BIỆN PHÁP PHÒNG NGỪA ĐỂ TRÁNH TIẾP XÚC VỚI NĂNG LƯỢNG Lò VI SÓNG QUÁ MỨC

1. Không vận hành lò vi sóng khi đang mở cửa vì việc mở cửa có thể gây hại cho sức khỏe do tiếp xúc với năng lượng vi sóng. Điều quan trọng là không được làm hỏng hoặc phá hỏng các chốt an toàn.
2. Không đặt bất kỳ vật gì giữa mặt trước của lò vi sóng và cửa lò hoặc để đất hoặc chặn chất tẩy rửa tích tụ trên bề mặt bật kín.
3. Không vận hành lò vi sóng nếu lò bị hư hỏng. Điều rất quan trọng là cần đóng chặt cửa lò và không có hư hỏng nào xảy ra.
 - a) Cửa (bao gồm cả cửa cong),
 - b) Bản lề và chốt (bị hỏng hoặc bị lỏng),
 - c) Gioăng cửa và bề mặt gioăng.
4. Không ai được phép điều chỉnh hoặc sửa chữa lò vi sóng ngoại trừ nhân viên bảo trì có trình độ.

HƯỚNG DẪN AN TOÀN QUAN TRỌNG

Khi sử dụng thiết bị điện, cần tuân thủ các biện pháp phòng ngừa an toàn cơ bản, bao gồm:

CẢNH BÁO! -- Để giảm nguy cơ bỏng, điện giật, hỏa hoạn, thương tích cho người hoặc tiếp xúc với năng lượng vi sóng quá mức:

1. Chỉ sử dụng thiết bị này đúng mục đích như mô tả trong hướng dẫn sử dụng. Không sử dụng hóa chất hoặc hơi ăn mòn trong thiết bị này. Loại lò này được thiết kế để chuyên dụng để hâm nóng, nấu hoặc sấy khô thực phẩm. Không được thiết kế để sử dụng trong công nghiệp hoặc phòng thí nghiệm.
2. Không vận hành lò khi không có đồ bên trong.
3. Không sử dụng thiết bị này nếu dây điện hoặc phích cắm bị hỏng, nếu thiết bị không hoạt động bình thường, hoặc nếu thiết bị bị hỏng hoặc rơi. Nếu dây điện bị hỏng, phải được thay thế bởi nhà sản xuất hoặc đại lý dịch vụ của nhà sản xuất hoặc người có trình độ tương đương để tránh nguy hiểm.
4. **CẢNH BÁO !** -- Chỉ cho phép trẻ em sử dụng lò vi sóng mà không có sự giám sát khi đã có hướng dẫn đầy đủ để trẻ có thể sử dụng lò vi sóng một cách an toàn và hiểu được những nguy hiểm khi sử dụng không đúng cách.
5. Để giảm nguy cơ hỏa hoạn trong khoang lò:

- Khi hâm nóng thức ăn trong hộp nhựa hoặc hộp giấy, hãy chú ý đến lò vi sóng vì có thể xảy ra cháy.
 - Tháo bỏ dây buộc xoắn khỏi túi giấy hoặc túi nhựa trước khi cho túi vào lò vi sóng.
 - Nếu thấy có khói, hãy tắt hoặc rút phích cắm của thiết bị và đóng chặt cửa để dập tắt ngọn lửa.
 - Không sử dụng khoang để lưu trữ. Không để giấy, dụng cụ nấu ăn hoặc thực phẩm trong khoang khi không sử dụng.
 - Lò vi sóng được thiết kế để hâm nóng thức ăn và đồ uống. Việc sấy khô thực phẩm hoặc quần áo và làm nóng miếng lót giữ ẩm, dép đi trong nhà, bọt biển, khăn ẩm và các vật dụng tương tự có thể dẫn đến nguy cơ gây thương tích, bắt lửa hoặc hỏa hoạn.
6. **CẢNH BÁO!** -- Không được đun nóng chất lỏng hoặc thực phẩm khác trong hộp kín vì chúng có thể phát nổ.
 7. Việc hâm nóng đồ uống bằng lò vi sóng có thể dẫn đến hiện tượng sôi bùng phát chậm, do đó cần phải cẩn thận khi cầm vào vật chứa.
 8. Không chiên thức ăn trong lò vi sóng. Dầu nóng có thể làm hỏng các bộ phận và dụng cụ của lò vi sóng, thậm chí gây bỏng da.
 9. Trứng còn nguyên vỏ và trứng luộc nguyên quả không nên được hâm nóng trong lò vi sóng vì chúng có thể phát nổ ngay cả sau khi quá trình hâm nóng bằng lò vi sóng đã kết thúc.
 10. Chọc thủng các loại thực phẩm có lớp vỏ dày như khoai tây, bí đỏ, táo và hạt dẻ trước khi nấu.
 11. Cần khuấy hoặc lắc đều bình sữa và lọ đựng thức ăn cho trẻ em và kiểm tra nhiệt độ trước khi dùng để tránh bị bỏng..
 12. Dụng cụ nấu nướng có thể nóng lên do nhiệt truyền từ thức ăn nóng. Có thể cần dùng miếng lót nồi để cầm dụng cụ.
 13. Cần kiểm tra dụng cụ để đảm bảo chúng phù hợp để sử dụng trong lò vi sóng.
 14. **CẢNH BÁO !** -- Bất kỳ ai không phải là người được đào tạo đều không được phép thực hiện bất kỳ hoạt động bảo dưỡng hoặc sửa chữa nào liên quan đến việc tháo bỏ bất kỳ nắp bảo vệ nào chống lại năng lượng vi sóng.
 15. Sản phẩm này là thiết bị ISM Nhóm 2 Loại B. Định nghĩa của Nhóm 2 bao gồm tất cả các ISM (Công nghiệp, Khoa học) và Y tế) Thiết bị trong đó năng lượng tần số vô tuyến được tạo ra và/hoặc sử dụng có chủ đích dưới dạng bức xạ điện từ để xử lý vật liệu, và thiết bị ăn mòn tia lửa điện. Đối với thiết bị Loại B, thiết bị phù hợp để sử dụng trong các cơ sở gia dụng và trong các cơ sở được kết nối trực tiếp với mạng lưới cung cấp điện áp thấp cung cấp cho các tòa nhà được sử dụng cho mục đích gia dụng.

16. Thiết bị này không dành cho những người (bao gồm cả trẻ em) có khả năng thể chất, giác quan hoặc tinh thần hạn chế, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được người chịu trách nhiệm về sự an toàn của họ giám sát hoặc hướng dẫn sử dụng thiết bị.
17. Cần giám sát trẻ em để đảm bảo chúng không chơi đùa với thiết bị.
18. Lò vi sóng chỉ được sử dụng khi đặt độc lập.
19. **CẢNH BÁO!** -- Không lắp lò vi sóng trên bếp nấu đầu hoặc thiết bị tỏa nhiệt khác. Nếu ở trong, nó có thể bị hư hỏng và chế độ bảo hành sẽ bị vô hiệu.
20. Không được đặt lò vi sóng trong tủ.
21. **CẢNH BÁO!** - Thiết bị và các bộ phận có thể tiếp cận sẽ nóng lên trong quá trình sử dụng.
22. **CẢNH BÁO!** -- Các bộ phận có thể chạm vào sẽ nóng khi sử dụng, nên giữ trẻ nhỏ tránh xa.
23. Trong quá trình sử dụng, thiết bị sẽ nóng. Hãy cẩn thận để không chạm vào các bộ phận làm nóng bên trong lò, bếp nấu hoặc lò nướng.
24. Khi thiết bị hoạt động, bề mặt có thể trở nên rất nóng.
25. Thiết bị phải được đặt dựa vào tường.
26. Thiết bị không dành cho trẻ em hoặc những người có khả năng thể chất, giác quan hoặc trí tuệ hạn chế, hoặc thiếu kinh nghiệm, trừ khi có người hướng dẫn hoặc giám sát.
27. **CẢNH BÁO!** -- Nếu cửa hoặc gioăng cửa bị hỏng, lò không được vận hành cho đến khi được sửa chữa bởi người có năng lực.
28. Thiết bị không được thiết kế để vận hành bằng bộ hẹn giờ ngoài hoặc hệ thống điều khiển từ xa riêng.
29. Lò vi sóng chỉ dùng trong gia đình, không dùng cho mục đích thương mại.
30. Không bao giờ tháo miếng giữ khoảng cách ở phía sau hoặc hai bên, vì nó đảm bảo khoảng cách tối thiểu từ tường để không khí lưu thông.
31. Hãy cố định đĩa xoay trước khi di chuyển thiết bị để tránh hư hỏng.
32. **CHÚ Ý!** – Việc sửa chữa hoặc bảo dưỡng thiết bị mà không phải bởi chuyên gia là nguy hiểm, vì trong quá trình đó phải tháo vỏ bảo vệ, vốn đảm bảo an toàn khỏi bức xạ vi sóng. Điều này cũng áp dụng khi thay dây nguồn hoặc đèn. Trong những trường hợp này, hãy gửi thiết bị đến trung tâm dịch vụ của chúng tôi.
33. Lò vi sóng chỉ dùng để nấu đông, nấu và hấp thực phẩm.
34. Sử dụng găng tay khi lấy thực phẩm nóng ra.
35. Cẩn thận! Hơi nước sẽ thoát ra khi mở nắp hoặc giấy bọc thực phẩm.
36. Thiết bị có thể được sử dụng bởi trẻ em từ 8 tuổi trở lên và người có khả năng thể chất, giác quan hoặc trí tuệ hạn chế, hoặc thiếu kinh nghiệm, nếu họ được giám sát hoặc hướng dẫn cách sử dụng an toàn và hiểu các nguy hiểm liên quan. Trẻ em

không được chơi với thiết bị. Việc vệ sinh và bảo dưỡng không nên do trẻ em thực hiện, trừ khi từ 8 tuổi trở lên và có người giám sát.

37. Nếu có khói phát ra, tắt hoặc rút phích cắm thiết bị và giữ cửa đóng để dập lửa.

HƯỚNG DẪN LẮP ĐẶT

1. Đảm bảo rằng tất cả vật liệu đóng gói đã được gỡ bỏ khỏi bên trong cửa lò.
2. **CẢNH BÁO !** -- Kiểm tra lò xem có hư hỏng nào không, chẳng hạn như cửa bị lệch hoặc cong, gioăng cửa và bề mặt kín bị hư hỏng, bản lề hoặc chốt cửa bị hỏng hoặc lỏng, hoặc có vết móp bên trong khoang lò hoặc trên cửa. Nếu có bất kỳ hư hỏng nào, không vận hành lò và liên hệ với nhân viên dịch vụ có trình độ.
3. Lò vi sóng này phải được đặt trên bề mặt phẳng, ổn định để chịu được trọng lượng của lò và thực phẩm nặng nhất có thể nấu trong lò.
4. Không đặt lò ở nơi có nhiệt, độ ẩm cao hoặc gần các vật liệu dễ cháy.
5. Để lò hoạt động đúng, phải đảm bảo đủ lưu thông không khí. Đảm bảo khoảng cách tối thiểu 20cm phía trên bề mặt lò và 5cm ở hai bên. Mặt sau của lò vi sóng phải đặt gần tường. Không che hoặc bịt bất kỳ lỗ thông gió nào trên thiết bị. Không tháo chân đế.
6. Đảm bảo dây nguồn không bị hỏng và không chạy dưới lò hoặc qua các bề mặt nóng hoặc sắc nhọn.
7. Ổ cắm phải dễ tiếp cận để có thể rút phích cắm nhanh chóng trong trường hợp khẩn cấp.
8. Không sử dụng lò ngoài trời.

HƯỚNG DẪN TIẾP ĐỊA

Thiết bị này phải được tiếp địa. Lò này được trang bị dây có dây tiếp địa kèm phích cắm tiếp địa. Nó phải được cắm vào ổ điện tường đã được lắp đặt và tiếp địa đúng cách. Trong trường hợp xảy ra sự cố chập điện, tiếp địa sẽ giảm nguy cơ điện giật bằng cách cung cấp đường thoát cho dòng điện. Khuyến nghị nên có một mạch điện riêng chỉ phục vụ cho lò. Sử dụng điện áp cao là nguy hiểm và có thể gây cháy hoặc tai nạn khác làm hỏng lò.

CẢNH BÁO! -- Sử dụng phích cắm tiếp địa không đúng cách có thể gây ra nguy cơ điện giật.

Lưu ý:

1. Nếu có bất kỳ thắc mắc nào về việc tiếp địa hoặc hướng dẫn điện, hãy tham khảo thợ điện hoặc nhân viên dịch vụ có trình độ.
2. Nhà sản xuất và đại lý không chịu trách nhiệm về bất kỳ hư hỏng lò hoặc thương

tích cá nhân nào do không tuân thủ các quy trình kết nối điện.
Các dây trong cáp chính được đánh màu theo mã sau:
Xanh và vàng = TIẾP ĐỊA
Xanh dương = TRUNG TÍNH
Nâu = DÒNG SÓNG

Nhiều sóng radio

Việc vận hành lò vi sóng có thể gây nhiễu cho radio, TV hoặc các thiết bị tương tự. Khi xảy ra nhiễu, có thể giảm hoặc loại bỏ bằng các biện pháp sau:

1. Vệ sinh cửa lò và bề mặt gioăng.
2. Thay đổi hướng ăng-ten thu của radio hoặc TV.
3. Di chuyển lò vi sóng so với vị trí của thiết bị thu.
4. Đặt lò vi sóng xa thiết bị thu hơn.
5. Cắm lò vi sóng vào ổ điện khác để lò và thiết bị thu nằm trên các mạch nhánh riêng biệt.

TRƯỚC KHI GỌI DỊCH VỤ BẢO HÀNH

Trước khi yêu cầu dịch vụ bảo hành, vui lòng kiểm tra từng mục sau:

- Đảm bảo lò đã được cắm chắc chắn vào ổ điện. Nếu không, rút phích cắm, chờ 10 giây, sau đó cắm lại chắc chắn.
- Kiểm tra cầu chì của mạch điện hoặc công tắc ngắt mạch chính xem có bị nổ hoặc ngắt không. Nếu chúng hoạt động bình thường, thử ổ điện bằng một thiết bị khác.
- Đảm bảo bảng điều khiển đã được lập trình đúng và hẹn giờ đã được cài đặt.
- Đảm bảo cửa lò đã đóng chắc, chốt khóa cửa hoạt động. Nếu cửa không đóng đúng, năng lượng vi sóng sẽ không lưu thông bên trong.

NẾU KHÔNG MỤC NÀO Ở TRÊN CÓ THỂ GIẢI QUYẾT VẤN ĐỀ, HÃY LIÊN HỆ KỸ THUẬT VIÊN CHUYÊN NGHIỆP. KHÔNG TỰ Ý CHỈNH SỬA HOẶC BẢO DƯỠNG LÒ

KỸ THUẬT NẤU ĂN

1. Sắp xếp thực phẩm cẩn thận. Đặt phần dày nhất về phía ngoài đĩa.
2. Theo dõi thời gian nấu. Nấu trong thời gian ngắn nhất được chỉ định và tăng thêm nếu cần. Thực phẩm nấu quá lâu có thể bốc khói hoặc cháy.
3. Che đậy thực phẩm khi nấu. Nắp đậy giúp ngăn bắn dầu mỡ và giúp thực phẩm chín đều.
4. Lật thực phẩm một lần trong quá trình nấu bằng lò vi sóng để rút ngắn thời gian nấu cho các món như gà và hamburger. Các món lớn như thịt quay phải được lật ít nhất một lần.
5. Sắp xếp lại thực phẩm như viên thịt giữa chừng quá trình nấu, cả từ trên xuống dưới và từ trung tâm ra ngoài đĩa.

HƯỚNG DẪN SỬ DỤNG DỤNG CỤ NẤU ĂN

1. Sóng vi sóng không xuyên qua kim loại. Chỉ sử dụng dụng cụ phù hợp với lò vi sóng. Không được sử dụng các hộp kim loại đựng thực phẩm hoặc đồ uống khi nấu bằng lò vi sóng. Yêu cầu này không áp dụng nếu nhà sản xuất quy định kích thước và hình dạng của dụng cụ kim loại phù hợp với nấu bằng lò vi sóng.
2. Sóng vi sóng không xuyên qua kim loại, do đó không nên sử dụng dụng cụ kim loại hoặc chén đĩa có viền kim loại.
3. Không sử dụng sản phẩm giấy tái chế khi nấu bằng lò vi sóng, vì chúng có thể chứa các mảnh kim loại nhỏ gây tia lửa hoặc cháy.
4. Nên sử dụng chén/dĩa tròn hoặc bầu dục thay vì hình vuông/hình chữ nhật, vì thực phẩm ở các góc dễ bị nấu quá chín.
5. Có thể dùng các dải giấy nhôm hẹp để ngăn phần thực phẩm bị nấu quá chín. Tuy nhiên, cần cẩn thận, không sử dụng quá nhiều và giữ khoảng cách 1 inch (2,54 cm) giữa giấy nhôm và khoang lò.

Danh sách dưới đây là hướng dẫn chung để giúp bạn chọn dụng cụ nấu ăn phù hợp.

Dụng cụ nấu ăn	Nấu ăn bằng lò vi sóng
Kính chịu nhiệt	Đúng
Kính không chịu nhiệt	KHÔNG
Gốm chịu nhiệt	Đúng

Đĩa nhựa an toàn với lò vi sóng	Đúng
Giấy nhà bếp	Đúng
Khay kim loại	KHÔNG
Giá kim loại	KHÔNG
Hộp đựng bằng giấy bạc và giấy bạc	KHÔNG


THÔNG SỐ KỸ THUẬT

Mức tiêu thụ điện	230-240V/5 0Hz, 1400 W (lò vi sóng)
Công suất định mức của lò vi sóng	900 W
Tần số vận hành:	2450MHz
Kích thước bên ngoài:	287 mm (Cao) × 490 mm (Rộng) × 393 mm (Sâu)
Kích thước khoang lò:	197 mm (Cao) × 340 mm (Rộng) × 336.8 mm (Sâu)
Dung tích lò:	Nhỏ gọn 23 lít
Trọng lượng tịnh:	Khoảng 13,4 kg
Chế độ chờ:	<0,8W

GHI CHÚ:Khoảng thời gian tối đa sau đó thiết bị tự động chuyển sang chế độ chờ là 20 phút.

SƠ ĐỒ SẢN PHẨM

1. Hệ thống khóa an toàn cửa
2. Cửa sổ lò vi sóng
3. Sàn khoang lò
4. Bảng điều khiển

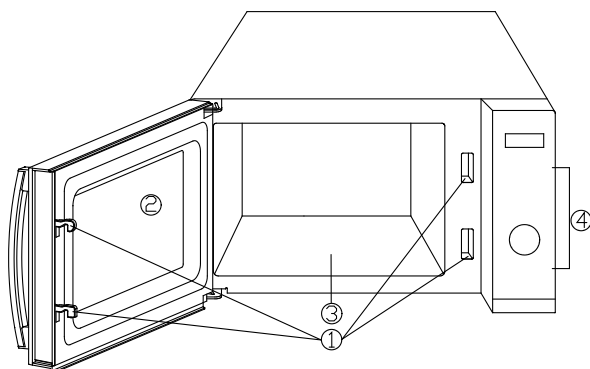

BẢNG ĐIỀU KHIỂN



- **MÀN HÌNH HIỂN THỊ**

Hiển thị thời gian, mức công suất.

- **THỰC ĐƠN NẤU TỰ ĐỘNG**

Cài đặt tức thời để nấu các món ăn phổ biến.

- **AUTO DEFROST (Rã đông)**

Nhấn để rã đông thực phẩm theo trọng lượng.

- **CÔNG SUẤT LÒ VI SÓNG**

Nhấn để chọn mức công suất vi sóng.

- **THỜI GIAN (quay số)**

Xoay nút xoay để cài đặt thời gian, trọng lượng hoặc khẩu phần ăn.

- **BẮT ĐẦU/KHỞI ĐỘNG NHANH**

Nhấn quay số để bắt đầu chương trình nấu ăn.

Nhấn nút xoay để cài đặt chương trình nấu ăn nhanh.

- **DỪNG ECO**

Nhấn một lần để tạm dừng nấu hoặc nhấn hai lần để hủy hoàn toàn quá trình nấu.

Nhấn để cài đặt chức năng tiết kiệm điện.

- **KHÓA TRẺ EM**

Nhấn để cài đặt khóa trẻ em.

Nhấn để cài đặt chức năng tắt tiếng.

- **ĐỒNG HỒ THỜI GIAN/ĐỒNG HỒ ĐẶT GIỜ**

Nhấn để cài đặt thời gian đồng hồ.

Nhấn để cài đặt chức năng hẹn giờ.

HƯỚNG DẪN VẬN HÀNH

- Khi lò vi sóng được cắm điện lần đầu, âm thanh " DE " sẽ phát ra và màn hình hiển thị " 1: 0 0".
- Trong quá trình cài đặt, nếu không thao tác gì trong 30 giây, một tiếng bíp sẽ phát và hệ thống tự trở về chế độ chờ.
- Trong khi nấu, nếu bạn nhấn nút STOP ECO một lần, chương trình sẽ tạm dừng, sau đó nhấn nút START/QUICK START để tiếp tục. Nếu bạn nhấn nút STOP ECO hai lần, chương trình sẽ bị hủy.
- Sau khi nấu xong, màn hình sẽ hiển thị Kết Thúc và 4 tiếng "DE" sẽ phát mỗi hai phút cho đến khi người dùng nhấn một nút bất kỳ hoặc mở cửa lò.
- Trong quá trình vận hành, nhấn nút hợp lệ, còi bíp sẽ kêu một lần; nếu nhấn nút không hợp lệ, còi bíp sẽ kêu hai lần.

CÀI ĐẶT ĐỒNG HỒ

Đây là đồng hồ 24 hoặc 12 giờ, bạn có thể chọn cài đặt thời gian đồng hồ theo chu kỳ 24 hoặc 12 giờ bằng cách nhấn nút TIME/SET CLOCK ở chế độ chờ.

1. Ở chế độ chờ, nhấn và giữ nút TIME/SET CLOCK trong 3 giây để chọn đồng hồ 24 giờ, nhấn lại lần nữa để chọn đồng hồ 12 giờ.
2. Xoay núm TIME để cài đặt chữ số giờ.
3. Nhấn nút TIME/SET CLOCK hoặc START/QUICK START một lần.
4. Xoay núm TIME để cài đặt chữ số phút.
5. Nhấn nút TIME/SET CLOCK hoặc START/QUICK START một lần để xác nhận.

LƯU Ý: Trong khi nấu, bạn có thể kiểm tra thời gian hiện tại bằng cách nhấn và giữ nút TIME/SET CLOCK trong 3 giây.

CÀI ĐẶT BỘ HẸN GIỜ

1. Ở chế độ chờ hoặc trong khi nấu, nhấn nút TIME/SET CLOCK một lần.
2. Xoay núm TIME để cài đặt thời gian mong muốn. Thời gian dài nhất là 95 phút.
3. Nhấn nút TIME/SET CLOCK hoặc START/QUICK START một lần để xác nhận.

LƯU Ý:

- Khi thời gian đếm ngược kết thúc, âm thanh "DE" sẽ vang lên để nhắc nhở bạn. Trong quá trình nấu hoặc tạm dừng, Bạn có thể kiểm tra thời gian đếm ngược bằng cách nhấn nút TIME/SET CLOCK, nếu nhấn nút STOP ECO khi màn hình hiển thị thời gian, chức năng này có thể bị hủy.
- Trong trạng thái nấu hoặc tạm dừng, bạn có thể cài đặt chương trình hẹn giờ bằng cách nhấn nút TIME/SET CLOCK một lần nếu trước đó chưa cài đặt hẹn giờ.

NẤU ẨM NHANH

Sử dụng tính năng này để lập trình lò vi sóng nấu thực phẩm ở công suất 100% một cách thuận tiện. Ở chế độ chờ, nhấn nút KHỞI ĐỘNG/KHỞI ĐỘNG NHANH một lần (Thời gian nấu mặc định là 30 giây). Lò sẽ tự động bắt đầu nấu.

LƯU Ý: Ở chế độ chờ hoặc trong khi nấu, bạn có thể thêm thời gian nấu bằng cách nhấn nút BẮT ĐẦU/BẮT ĐẦU NHANH (mỗi lần nhấn sẽ tăng thêm 30 giây và tối đa 10 phút).

NẤU BẰNG LÒ VI SÓNG

1. Ở chế độ chờ, nhấn nút VI SÓNG nhiều lần để chọn mức công suất nấu.
2. Xoay nút TIME để cài đặt thời gian nấu. Thời gian nấu dài nhất là 95 phút.
3. Nhấn nút BẮT ĐẦU/BẮT ĐẦU NHANH để tuân thủ.

Nhấn nút CÔNG SUẤT LÒ VI SÓNG để cài đặt mức công suất nấu:

Nhấn CÔNG SUẤT LÒ VI SÓNG	Nguồn (Màn hình)	Nhấn CÔNG SUẤT LÒ VI SÓNG	Nguồn (Màn hình)
Một lần	100% (P100)	6 lần	50% (P-50)
Hai lần	90% (P-90)	7 lần	40% (P-40)
3 lần	80% (P-80)	8 lần	30% (P-30)
4 lần	70% (P-70)	9 lần	20% (P-20)
5 lần	60% (P-60)	10 lần	10% (P-10)

LƯU Ý: Trong khi nấu, bạn có thể kiểm tra mức công suất nấu bằng cách nhấn nút VI SÓNG. Nếu bạn muốn nấu ở công suất tối đa, hãy bỏ qua bước đầu tiên.

TỰ ĐỘNG RÃ ĐÔNG

Thời gian rã đông và mức công suất sẽ được tự động cài đặt sau khi trọng lượng thực phẩm được lập trình. Trọng lượng thực phẩm đông lạnh dao động từ 100 g đến 18 00 g.

1. Ở chế độ chờ, nhấn nút AUTO DEFROST một lần.
2. Xoay nút TIME để cài đặt trọng lượng thực phẩm.
3. Nhấn nút BẮT ĐẦU/BẮT ĐẦU NHANH để xác nhận.

LƯU Ý: Trong quá trình rã đông, hệ thống sẽ tạm dừng và phát ra âm thanh để nhắc nhở người dùng lật thực phẩm, sau đó nhấn nút BẮT ĐẦU/BẮT ĐẦU NHANH để tiếp tục rã đông.

NẤU TỰ ĐỘNG

Đối với các món ăn hoặc chế độ nấu sau, bạn không cần phải lập trình công suất và thời gian nấu. Chỉ cần chỉ định loại thực phẩm bạn muốn nấu cũng như trọng lượng hoặc khẩu phần ăn.

1. Ở chế độ chờ, nhấn nút menu tương ứng.
2. Xoay nút TIME để cài đặt trọng lượng hoặc khẩu phần ăn.
3. Nhấn nút BẮT ĐẦU/BẮT ĐẦU NHANH để bắt đầu.

1. Thực đơn nấu tự động:

Đồ ăn	Ghi chú
Đồ uống (200 ml/cốc, 1-3 cốc)	Kết quả nấu tự động phụ thuộc vào các yếu tố như hình dạng và kích thước của thực phẩm, sở thích cá nhân của bạn về độ chín của một số loại thực phẩm nhất định và thậm chí cả cách bạn đặt thực phẩm vào lò vi sóng. Nếu bạn thấy kết quả chưa hoàn toàn hài lòng, vui lòng điều chỉnh thời gian nấu một chút cho phù hợp.
Khoai tây (230±10 g/khẩu phần, 1~3 khẩu phần)	
Bánh bao hấp (150 g, 300 g, 450 g)	
Bông ngô (100 g)	
Bữa tối đông lạnh (200-800 g)	
Rau tươi (200-600 g)	
Cháo (50 g, 100 g, 150 g)	

CHỨC NĂNG TIẾT KIỆM ĐIỆN

Để cài đặt: Ở chế độ chờ, nhấn và giữ nút STOP ECO trong 3 giây, màn hình hiển thị sẽ tắt và chế độ tiết kiệm điện được kích hoạt.

Để hủy: Ở chế độ tiết kiệm điện, bạn có thể nhấn bất kỳ nút nào một lần hoặc mở hoặc đóng cửa lò một lần để thoát khỏi chế độ tiết kiệm điện.

CHỨC NĂNG TẮT TIẾNG

Để cài đặt: Ở chế độ chờ, nhấn nút KHÓA TRỄ EM một lần, màn hình sẽ hiển thị " OFF" trong 5 giây, sau đó hệ thống sẽ trở về chế độ chờ. Âm thanh còi báo đã tắt.

Để hủy: Ở chế độ chờ và tắt tiếng, nhấn nút KHÓA TRỄ EM một lần, tiếng bíp sẽ vang lên và màn hình hiển thị "bật" trong 5 giây, hệ thống sẽ trở về chế độ chờ.

BẢO VỆ BẮM DÍNH NÚT

Ở bất kỳ trạng thái nào, nếu bất kỳ nút nào trên bảng điều khiển bị kẹt trong 1 phút, chương trình sẽ ngừng hoạt động ngay lập tức, màn hình hiển thị "FAIL" và âm thanh " DE " sẽ vang lên. Nếu nút bị kẹt liên tục, âm thanh " DE " sẽ vang lên mỗi phút. Bất kỳ nút nào cũng không có tác dụng tại thời điểm này. Sau khi khắc phục sự cố, hãy nhấn nút STOP ECO để trở về chế độ chờ.

Sử dụng để ngăn chặn trẻ em sử dụng lò vi sóng mà không có sự giám sát.

Khóa trẻ em tự động:

Để bật chế độ khóa trẻ em: Ở chế độ chờ, nếu không có thao tác nào trong vòng một phút, lò vi sóng sẽ tự động chuyển sang chế độ khóa trẻ em, màn hình hiển thị sẽ hiển thị "Loc". Nhấn bất kỳ nút nào, màn hình hiển thị sẽ hiển thị "Loc" trong 5 giây, sau đó lò vi sóng sẽ trở về chế độ chờ. Ở trạng thái khóa, tất cả các nút đều bị vô hiệu hóa, Để hủy: Ở chế độ khóa trẻ em, hãy mở hoặc đóng cửa lò để hủy chương trình và chữ "Loc" sẽ biến mất.

Khóa trẻ em thủ công:

Để cài đặt: Ở chế độ chờ, nhấn và giữ nút "Loc" trong 3 giây, một tiếng bíp sẽ vang lên và màn hình hiển thị "Loc". Nhấn bất kỳ nút nào, màn hình hiển thị "Loc" trong 5 giây, sau đó lò vi sóng sẽ trở về chế độ chờ. Ở trạng thái khóa, tất cả các nút đều bị vô hiệu hóa,

Để hủy: Nhấn và giữ nút KHÓA TRẺ EM trong 3 giây, tiếng bíp sẽ vang lên và chữ "Loc" sẽ biến mất.

VỆ SINH VÀ BẢO DƯỠNG

1. Tắt lò và rút phích cắm khỏi ổ điện trước khi vệ sinh.
2. Giữ bên trong lò luôn sạch sẽ. Khi thức ăn bắn ra hoặc chất lỏng tràn bám vào thành lò, hãy lau bằng khăn ẩm. Có thể dùng chất tẩy rửa nhẹ nếu lò quá bẩn. Tránh dùng bình xịt hoặc chất tẩy mạnh vì chúng có thể làm ố, xước hoặc xỉn màu bề mặt cửa.
3. Bên ngoài lò nên được lau bằng khăn ẩm. Để tránh hư hỏng bộ phận bên trong, không để nước thấm vào các khe thông gió.
4. Thường xuyên lau cửa, kính cửa cả hai mặt, gioăng cửa và các bộ phận lân cận bằng khăn ẩm để loại bỏ vết bẩn hay thức ăn bắn ra. Không dùng chất tẩy có tính mài mòn.
5. Không được dùng máy hơi nước để vệ sinh.
6. Không để bảng điều khiển bị ướt. Vệ sinh bằng khăn mềm, ẩm. Khi lau bảng điều khiển, hãy mở cửa lò để tránh việc lò bật lên ngoài ý muốn.
7. Nếu hơi nước đọng lại trong hoặc xung quanh cửa lò, hãy lau bằng khăn mềm. Hiện tượng này có thể xảy ra khi lò hoạt động trong môi trường ẩm cao và là điều bình thường.
8. Sàn lò cần được vệ sinh thường xuyên để tránh tiếng ồn. Chỉ cần lau bề mặt đáy lò bằng chất tẩy nhẹ.
9. Khử mùi lò bằng cách kết hợp 1 cốc nước với nước cốt và vỏ của 1 quả chanh cho vào bát chịu nhiệt, quay trong lò 5 phút. Sau đó lau kỹ và để khô bằng khăn mềm.
10. Nếu bóng đèn trong lò bị cháy, vui lòng liên hệ dịch vụ khách hàng để được thay thế.
11. Lò cần được vệ sinh định kỳ và loại bỏ cặn bẩn thức ăn. Không bảo dưỡng lò sạch sẽ có thể gây hư hại bề mặt, ảnh hưởng đến tuổi thọ thiết bị và thậm chí có thể dẫn đến tình huống nguy hiểm.
12. Không bỏ thiết bị này vào thùng rác sinh hoạt. Thiết bị phải được xử lý tại trung tâm thu gom chất thải chuyên dụng do chính quyền địa phương quy định.

Microwave Oven Instructions



Model:R-2343FB-BK

Please read these instructions carefully before installing and operating the oven.

CONTENT

CONTENT	1
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	2
IMPORTANT SAFETY INSTRUCTIONS.....	2
INSTALLATION GUIDE.....	5
GROUNDING INSTRUCTIONS	5
RADIO INTERFERENCE	6
BEFORE CALLING FOR SERVICE	6
COOKING TECHNIQUES	7
COOKING UTENSILS GUIDE	7
SPECIFICATIONS	8
PRODUCT DIAGRAM.....	8
CONTROL PANEL	9
OPERATION INSTRUCTIONS.....	10
SETTING THE CLOCK	10
SETTING THE TIMER	10
EXPRESS COOKING.....	11
MICROWAVE COOKING	11
AUTO DEFROST	11
AUTO COOK	12
POWER SAVING FUNCTION.....	12
MUTE FUNCTION.....	12
BUTTON ADHESION PROTECTION	12
CHILD LOCK	13
CLEANING AND CARE	14

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
 - a) Door (including any bent),
 - b) Hinges and latches (broken or loosened),
 - c) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

WARNING!--To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
2. Do not operate the oven when empty.
3. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. **WARNING!--**Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
5. To reduce the risk of fire in the oven cavity:

- When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition.
 - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
 - The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
6. **WARNING!**--Liquid or other food must not be heated in sealed containers since they are liable to explode.
 7. Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
 8. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
 9. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
 10. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
 11. The contents of feeding bottles and baby food jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
 12. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
 13. Utensils should be checked to ensure that they are suitable for use in microwave oven.
 14. **WARNING!**--It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
 15. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.
 16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge,

- unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.
 18. The microwave oven is only used in freestanding.
 19. **WARNING!**--Do not install oven over a range cook top or other heat-producing appliance. if installed could be damaged and the warranty would be avoid .
 20. The microwave oven must not be placed in the cabinet.
 21. **WARNING!**--The appliance and its accessible parts become hot during use.
 22. **WARNING!**--Accessible parts may become hot during use. Young children should be kept away.
 23. During use the appliances becomes hot. Care should be taken to avoid touching heating elements inside the oven, for cooking ranged and ovens.
 24. The temperature of accessible surfaces may be high when the appliance is operating.
 25. The appliance shall be placed against a wall.
 26. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
 27. **WARNING!**--If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
 28. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
 29. The microwave oven is for household use only and not for commercial use.
 30. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
 31. Please secure the turntable before you move the appliance to avoid damages.
 32. **CAUTION!**--It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
 33. The microwave oven is intended for defrosting, cooking and steaming of food only.
 34. Use gloves if you remove any heated food.
 35. Caution! Steam will escape, when opening lids or wrapping foil.
 36. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by

children unless they are aged from 8 years and above and supervised.

37. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING!**--Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow minimum 20cm of free space necessary above the top surface of the oven and 5cm at both sides. The microwave oven rear plate must be placed close to the wall. Do not cover or block any openings on the appliance. Do not remove feet.
6. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
7. The socket must be readily accessible so that it can be easily unplugged in an emergency.
8. Do not use the oven outdoors.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING!--Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the

oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

BEFORE CALLING FOR SERVICE

Before asking for service, please check each item below:

- Check to ensure the oven is plugged in securely. If not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- Check to ensure the control panel is programmed correctly and the timer is set.
- Check to ensure the door is securely closed, engaging the door lock system. If the door is not properly closed, the microwave energy will not flow inside.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

COOKING TECHNIQUES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

COOKING UTENSILS GUIDE

1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.

Cookware	Microwave Cooking
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Kitchen Paper	Yes
Metal Tray	No
Metal Rack	No
Aluminum Foil & Foil Containers	No


SPECIFICATIONS

Power Consumption	230-240V/50Hz, 1400W(microwave)
Output	900W
Operation Frequency	2450MHz
Outside Dimensions	287mm(H)×490mm(W)×393mm(D)
Oven Cavity Dimensions	197mm(H)×340mm(W)×336.8 mm(D)
Oven Capacity	Compact 23Liters
Net Weight	Approx.13.4kg
Standby mode	<0.8W

NOTE: The max period after which the equipment reaches automatically standby mode is 20 minutes.

PRODUCT DIAGRAM

1. Door Safety Lock System
2. Oven Window
3. Cavity Floor
4. Control Panel

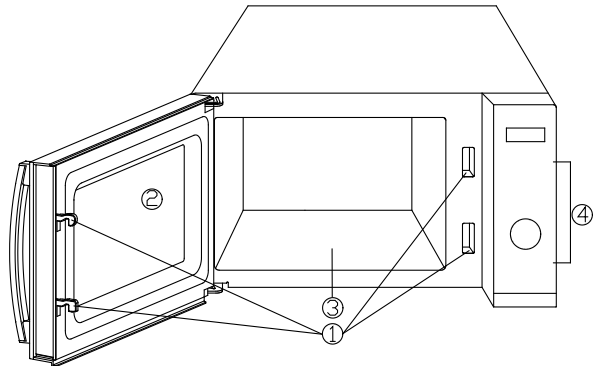

CONTROL PANEL



- **DISPLAY SCREEN**

Time and power are displayed.

- **AUTO COOK MENUS**

Instant settings to cook popular foods.

- **AUTO DEFROST (Rã đông)**

Press to defrost food based on weight.

- **MICROWAVE POWER**

Press to select microwave power level.

- **TIME (dial)**

Turn the dial to set time, food weight or servings.

- **START/QUICK START** **BẮT ĐẦU / Khởi động nhanh**

Press the dial to start cooking programs.

Press the dial to set express cooking program.

- **STOP ECO**

Press once to temporarily stop cooking, or twice to cancel cooking altogether.

Press to set power saving function.

- **CHILD LOCK**

Press to set child lock.

Press to set mute function.

- **TIME/SET CLOCK**

Press to set clock time.

Press to set timer function.

OPERATION INSTRUCTIONS

- When the oven is first plugged in, a "DE" will sound and the display screen will show "1: 00".
- During setting, the system will return to standby mode if there is not any operation within 30 seconds.
- During cooking, if you press STOP ECO button once, the program will be paused, then press START/QUICK START button to resume. If you press STOP ECO button twice, the program will be cancelled.
- After cooking ends, the display screen will show End and 4 "DE" will sound every two minutes until user press any button or open the door.
- In the process of operation, press a valid button, the buzzer rings once, but if press a invalid button, the buzzer rings twice.

SETTING THE CLOCK

This is a 24- or 12- hour clock, you can choose to set the clock time in 24- or 12- hour cycle by pressing TIME/SET CLOCK button in standby mode.

1. In standby mode, press and hold TIME/SET CLOCK button for 3 seconds to select 24- hour clock, press it again to select 12- hour clock.
2. Turn TIME dial to set hour digit.
3. Press TIME/SET CLOCK or START/QUICK START button once.
4. Turn TIME dial to set minute digit.
5. Press TIME/SET CLOCK or START/QUICK START button once to confirm.

NOTE: During cooking, you can check the current clock time by pressing and holding TIME/SET CLOCK button for 3 seconds.

SETTING THE TIMER

1. In standby mode or during cooking, press TIME/SET CLOCK button once.
2. Turn TIME dial to set desired time. The longest time is 95 minutes.
3. Press TIME/SET CLOCK or START/QUICK START button once to confirm.

NOTE:

- When the countdown ends, a "DE" will sound to remind you. During cooking or pausing state, you can check the countdown time by pressing TIME/SET CLOCK button, if STOP ECO button is pressed when the display screen shows the time, the function can be cancelled.
- During cooking or pausing state, you can set timer program by pressing TIME/SET CLOCK button once if timer has not been set before.

EXPRESS COOKING

Use this feature to program the oven to microwave food at 100% power conveniently. In standby mode, press START/QUICK START button once (Default cooking time is 30 seconds). The oven will start cooking automatically.

NOTE: In standby mode or during cooking, you can add cooking time by pressing START/QUICK START button (each press to increase 30 seconds, and up to 10 minutes).

MICROWAVE COOKING

1. In standby mode, press MICROWAVE POWER button repeatedly to select cooking power level.
2. Turn TIME dial to set cooking time. The longest time is 95 minutes.
3. Press START/QUICK START button to conform.

Press MICROWAVE POWER button to set cooking power level:

Press MICROWAVE POWER	Power (Display)	Press MICROWAVE POWER	Power (Display)
Once	100% (P100)	6 times	50% (P-50)
Twice	90% (P-90)	7 times	40% (P-40)
3 times	80% (P-80)	8 times	30% (P-30)
4 times	70% (P-70)	9 times	20% (P-20)
5 times	60% (P-60)	10 times	10% (P-10)

NOTE: During cooking, you can check the cooking power level by pressing MICROWAVE POWER button. If you want to cook at full power level, omit the first step.

AUTO DEFROST

The defrosting time and power level are automatically set once the food weight is programmed. The frozen food weight ranges from 100 g to 1800 g.

1. In standby mode, press AUTO DEFROST button once.
2. Turn TIME dial to set food weight.
3. Press START/QUICK START button to confirm.

NOTE: During defrosting, the system will pause and sound to remind user to turn food over, and then press START/QUICK START button to resume the defrosting.

AUTO COOK

For the following food or cooking mode, it is not necessary to program the cooking power and time. It is sufficient to indicate the type of food that you wish to cook as well as the weight or servings of the food.

1. In standby mode, press the corresponding menu button.
2. Turn TIME dial to set food weight or servings.
3. Press START/QUICK START button to start.

1. Auto cook menus:

Food	Note
Beverages (200 ml/cup, 1-3 cups)	The result of auto cooking depends on factors such as the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly.
Potato (230±10 g/serving, 1~3 servings)	
Steamed Bun (150 g, 300 g, 450 g)	
Popcorn (100 g)	
Frozen Dinner (200-800 g)	
Fresh Vegetables (200-600 g)	
Porridge (50 g, 100 g, 150 g)	

POWER SAVING FUNCTION

To set: In standby mode, press and hold STOP ECO button for 3 seconds, the display screen goes off and the power saving mode is activated.

To cancel: In power saving mode, you can press any button once, or open or close the oven door once to exit power saving mode.

MUTE FUNCTION

To set: In standby mode, press CHILD LOCK button once, the display screen will show "oFF" for 5 seconds, then the system will return to standby mode. The buzzer sound has been turned off.

To cancel: In standby and mute mode, press CHILD LOCK button once, a beep will sound and the display screen will show "on" for 5 seconds, the system will return to standby mode.

BUTTON ADHESION PROTECTION

In any state, if any button on the control panel is adhesion for 1 minute, the program stops working immediately, the display screen shows "FAIL" and a "DE" will sound. If the button is adhesion all the time, a "DE" will sound every one minute. Any button is

invalid at this time. After troubleshooting, press STOP ECO button to return to standby.

CHILD LOCK

Use to prevent unsupervised operation of the oven by children.

Automatic child lock:

To enter child lock: In standby mode, if there is not any operation within one minute, the oven will auto enter child lock mode, the display screen will show "Loc". Press any button, the display screen will show "Loc" for 5 seconds then the oven will return to standby mode. In the lock state, all buttons are disabled,

To cancel: In child lock mode, open or close the oven door to cancel the program and the "Loc" will disappear.

Manual child lock:

To set: In standby mode, press and hold CHILD LOCK button for 3 seconds, a beep will sound and the display screen will show "Loc". Press any button, the display screen will show "Loc" for 5 seconds then the oven will return to standby mode. In the lock state, all buttons are disabled,

To cancel: Press and hold CHILD LOCK button for 3 seconds, a beep will sound and the "Loc" will disappear.

CLEANING AND CARE

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. A steam cleaner is not be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. The oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. If the light bulb burns out, please contact customer service to have it replaced.
11. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
12. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

SHARP